

1 / 7


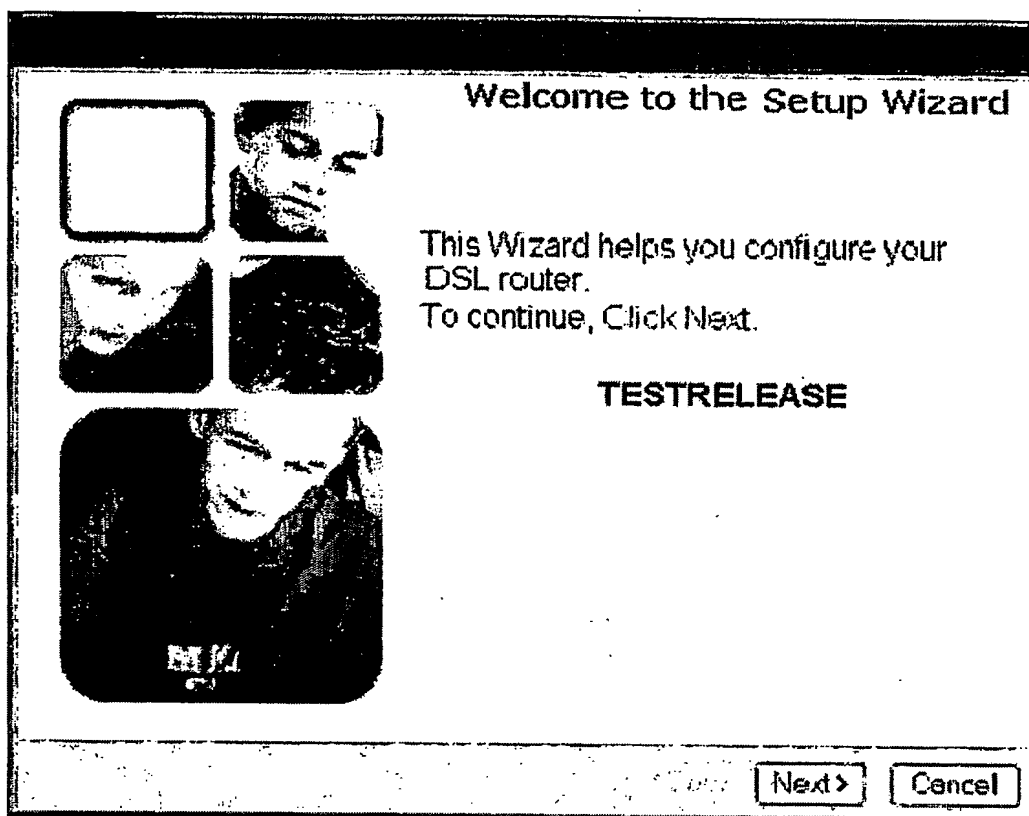


Fig. 1

BEST AVAILABLE COPY

2 / 7

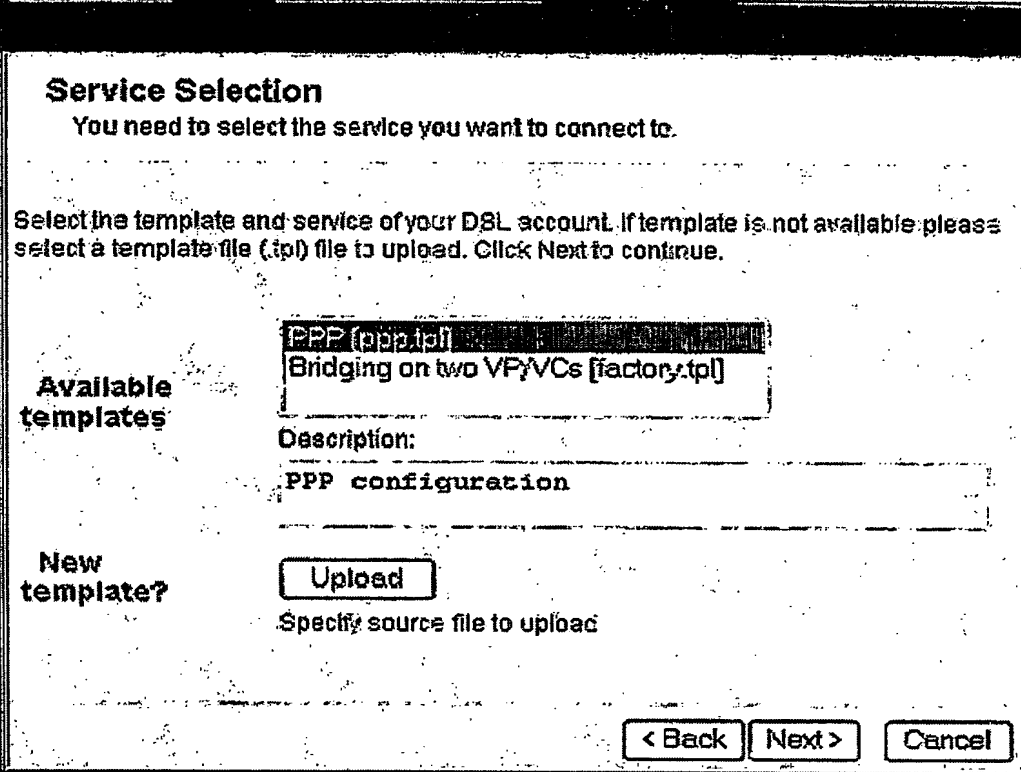

Service Selection

You need to select the service you want to connect to.

Select the template and service of your DSL account. If template is not available please select a template file (.tpl) file to upload. Click Next to continue.

Available templates

PPP (ppp.tpl)
Bridging on two VP/VCs (factory.tpl)

Description:

PPP configuration

New template?

Specify source file to upload

Fig. 2

BEST AVAILABLE COPY

3 / 7

The image shows a software window titled "ATM parameters". Inside the window, the text "ATM VPI/CI value" is displayed. Below this, a message states: "Configure the VPI/CI value. This value should be provided by your ISP". There is a label "VPI/CI" followed by a dropdown menu showing the value "8*35". Below the dropdown, the text "Select the correct VPI/CI value" is present. At the bottom right of the window, there are three buttons: "< Back", "Next >", and "Cancel".

ATM parameters
ATM VPI/CI value

Configure the VPI/CI value. This value should be provided by your ISP

VPI/CI 8*35 ▾
Select the correct VPI/CI value

< Back Next > Cancel


Fig. 3

BEST AVAILABLE COPY

4 / 7

Point-to-point_protocol
Configure PPP parameters

Configure the PPP settings. These values should be provided by your ISP.

PPP type 
Select the PPP type.

 
Dial-In mode 
Select your preferred dial-in mode.

Fig. 4

BEST AVAILABLE COPY

5 / 7

Start configuring
Review settings before configuring the DSL router

The Wizard has enough information to configure your router. If you want to review or change settings, click Back, click Next to start configuration.

Settings:


Device:	
Name	510
Serial #	0814LD7
Device Configuration:	
Region	Belgium
Provider	net
Service	PPP
Description	PPP configuration

< Back Next > Cancel


Fig. 5

BEST AVAILABLE COPY

6 / 7

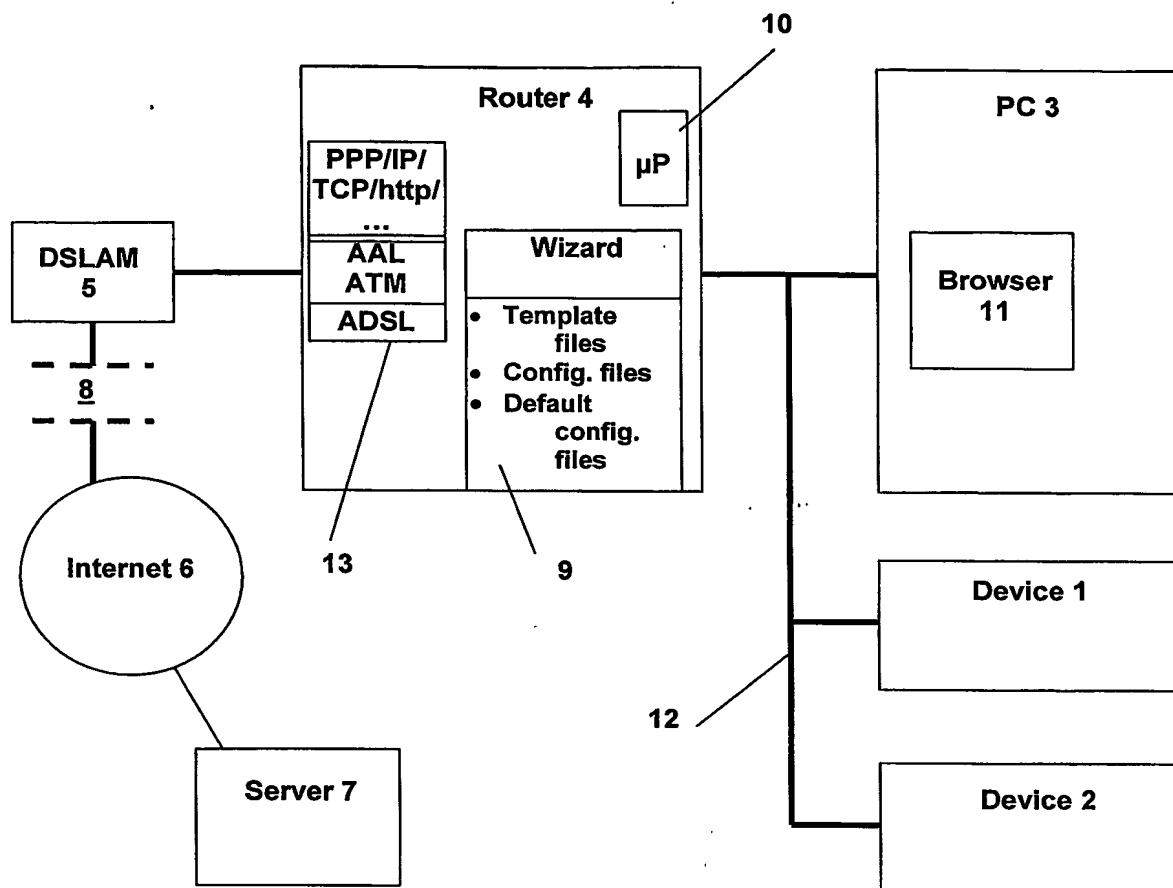**Fig. 6**

7/7

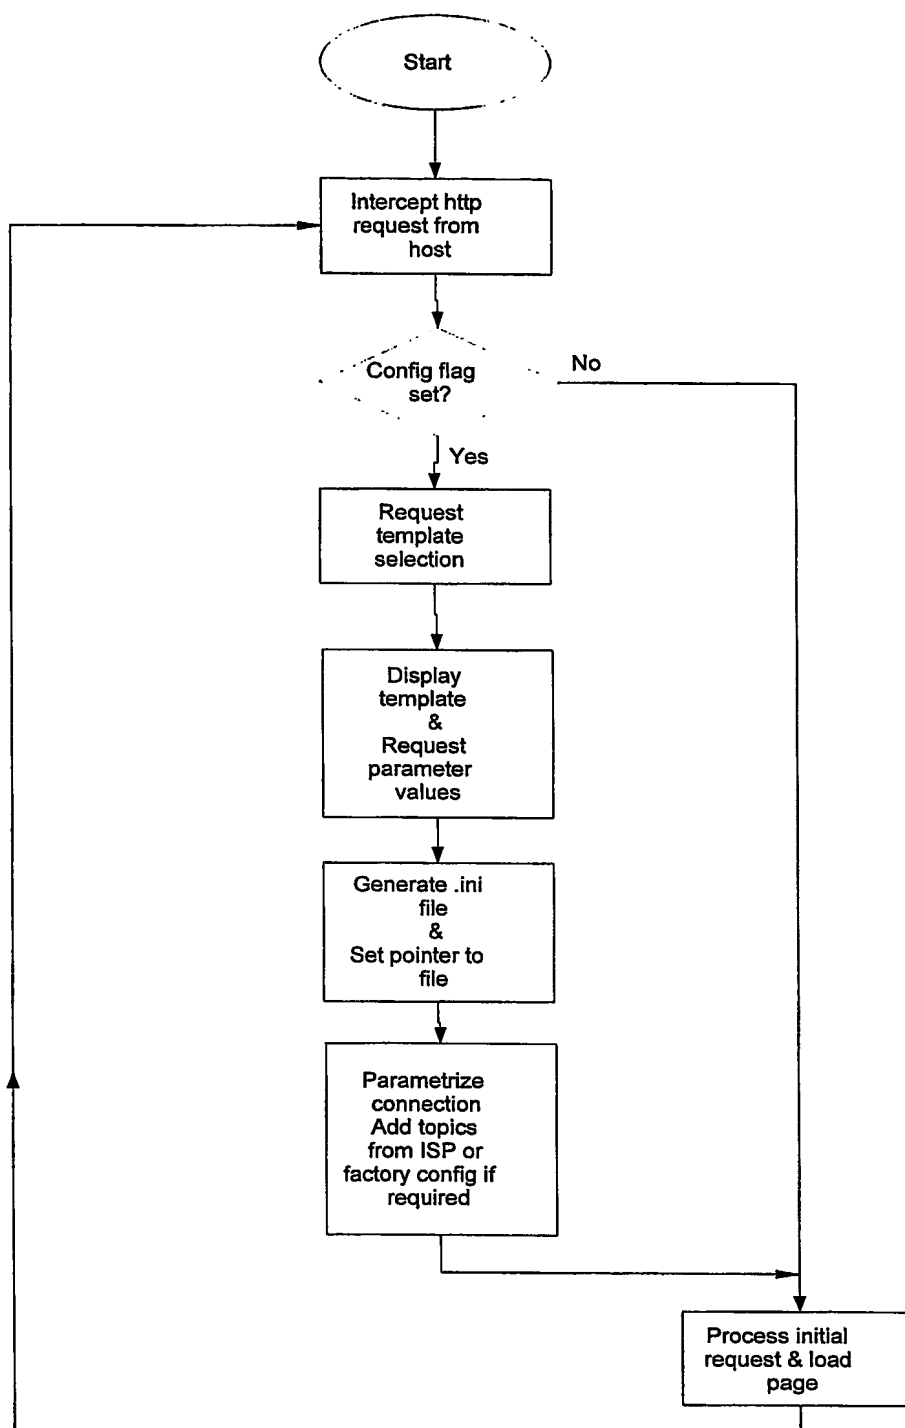**Fig. 7****BEST AVAILABLE COPY**